UltraView Quick Visual Guide

- Instrument Identification
- Leak Detection Mode
- Power Mode (Partial Discharge Detection)*

*only available in the UltraView Plus model




Instrument Identification

ULTRAVIEW Quick Visual Guide



UltraView Cloud Registration

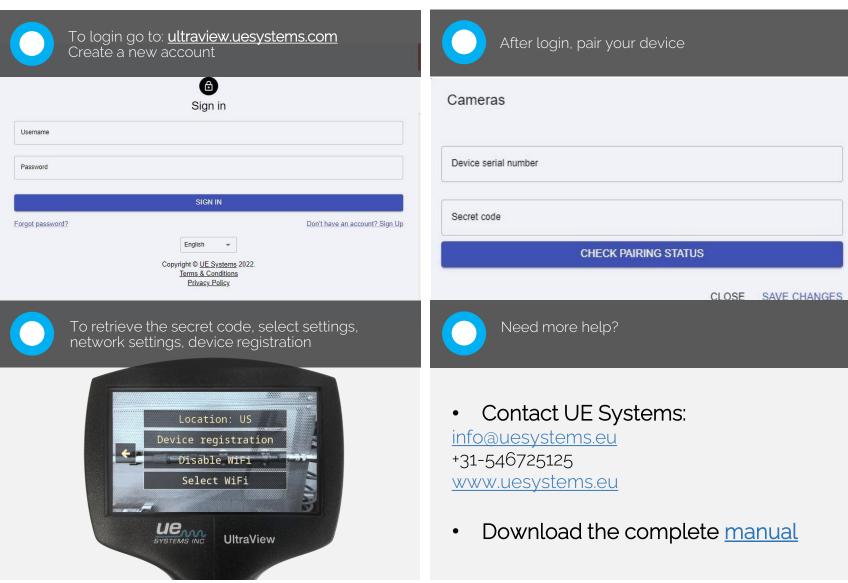




Items included with the UltraView

- 1. 2 Rechargeable batteries
- 2. Battery charger pod
- 3. Power adapter
- 4. UltraView



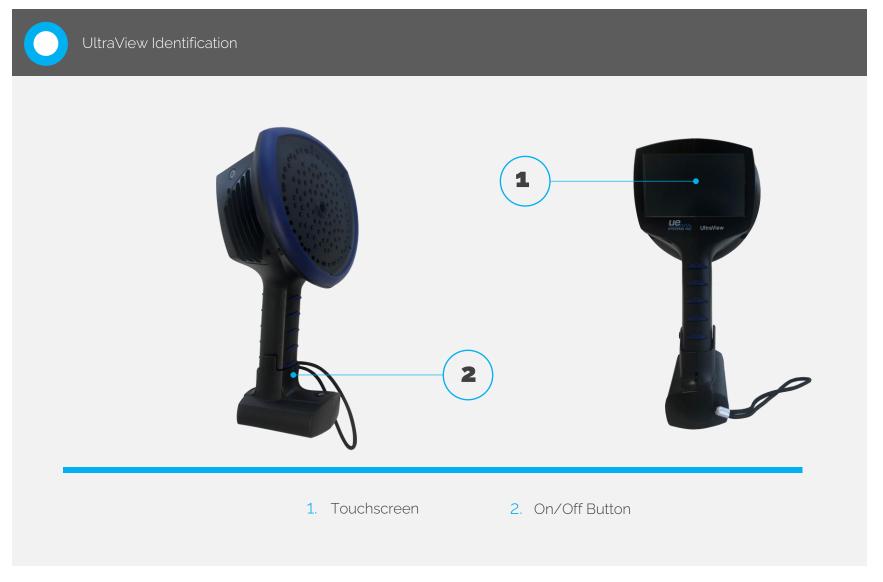





UltraView Identification

 
- 1. 124 Low Noise MEMS
- 2. Camera
- 3. Wireless Data Transfer
- 4. Wrist Strap
- 5. Battery Pack



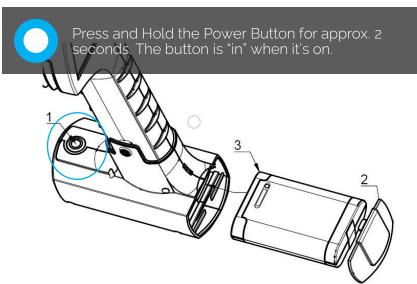





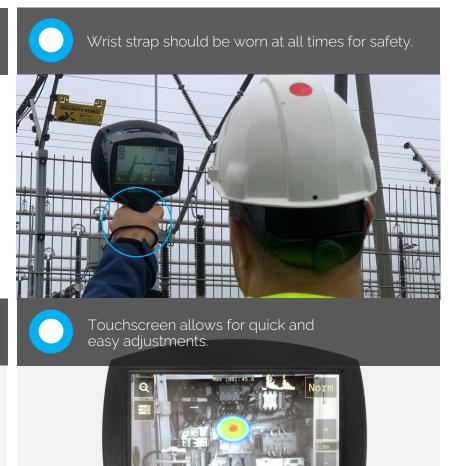

UE SYSTEMS INC

UltraView






Leak Detection Mode

ULTRAVIEW Quick Visual Guide






Press and Hold the Power Button for approx. 2 seconds. The button is "in" when it's on

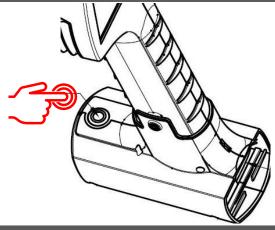

Select Change Mode*

 *you can only change mode if you have the UltraView Plus camera














In settings select More to change the air mode settings

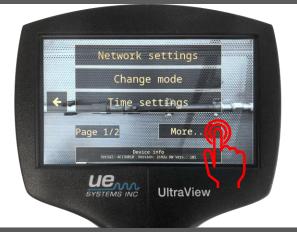








Select air mode settings to change the leak parameters





 
Here you can change leak settings







If the camera is connected to WiFi, snapshots are automatically uploaded to the cloud

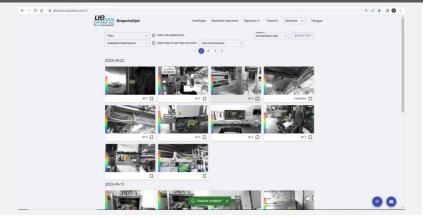




In the main screen, press snapshot to store a leak






From the cloud you can create your leak report

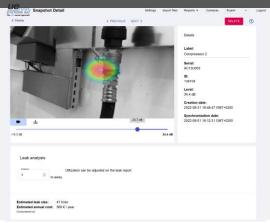

UltraView Leak Reporting Example

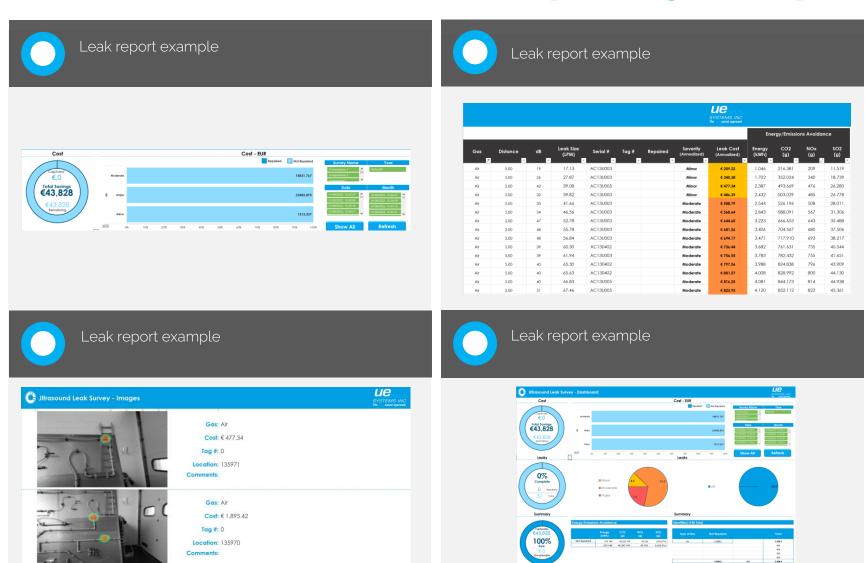



SAFETY: WRIST STRAP WORN ALL TIMES


Power Mode (Partial Discharge Detection)* ULTRAVIEW Quick Visual Guide

*only available in the UltraView Plus model





Press and Hold the Power Button for approx. 2 seconds. The button is "in" when it's on

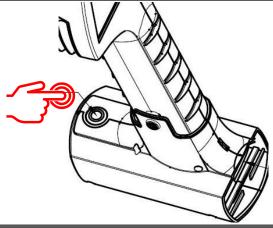

Select Change Mode*

*you can only change mode if you have the UltraView Plus camera













 
Before scanning be sure you are in the Power mode



 
Safely scan the electrical equipment (distance)















In the cloud you can download the audio files related to the partial discharge.






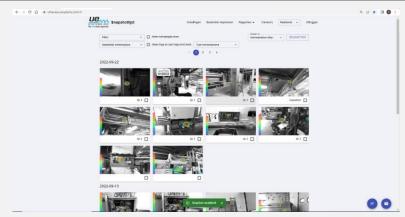




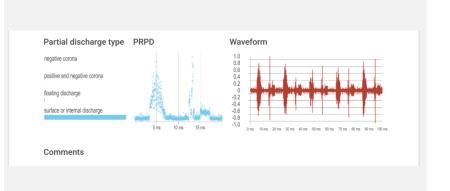

UltraView Partial Discharge Reporting

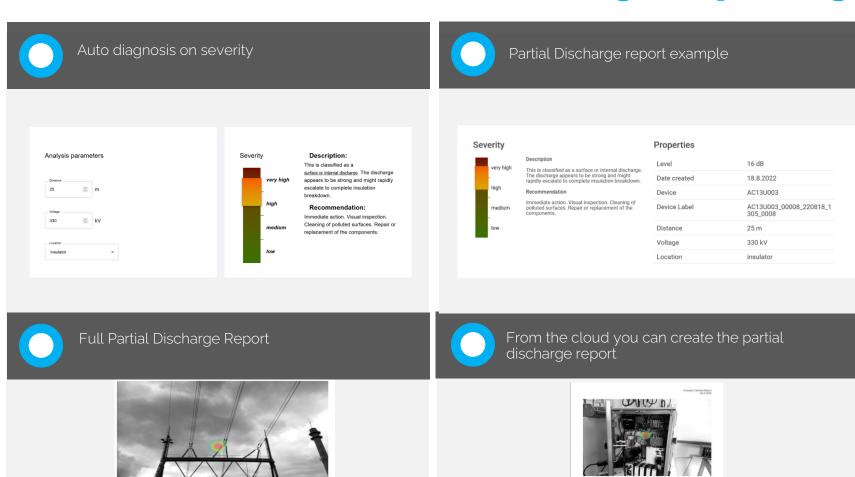

AC13U003

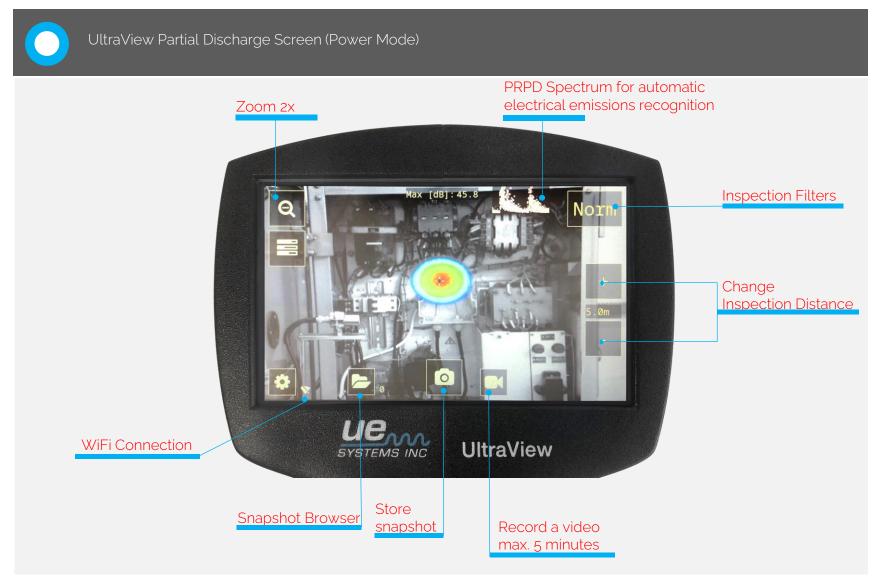

SAFETY: WRIST STRAP WORN ALL TIMES

Need further support? Want information regarding products or training?

CONTACT:

UE Systems, Inc. 14 Hayes Street, Elmsford, NY 10523 USA

T: 914-592-1220 | E: info@uesystems.com | W: www.uesystems.com

